
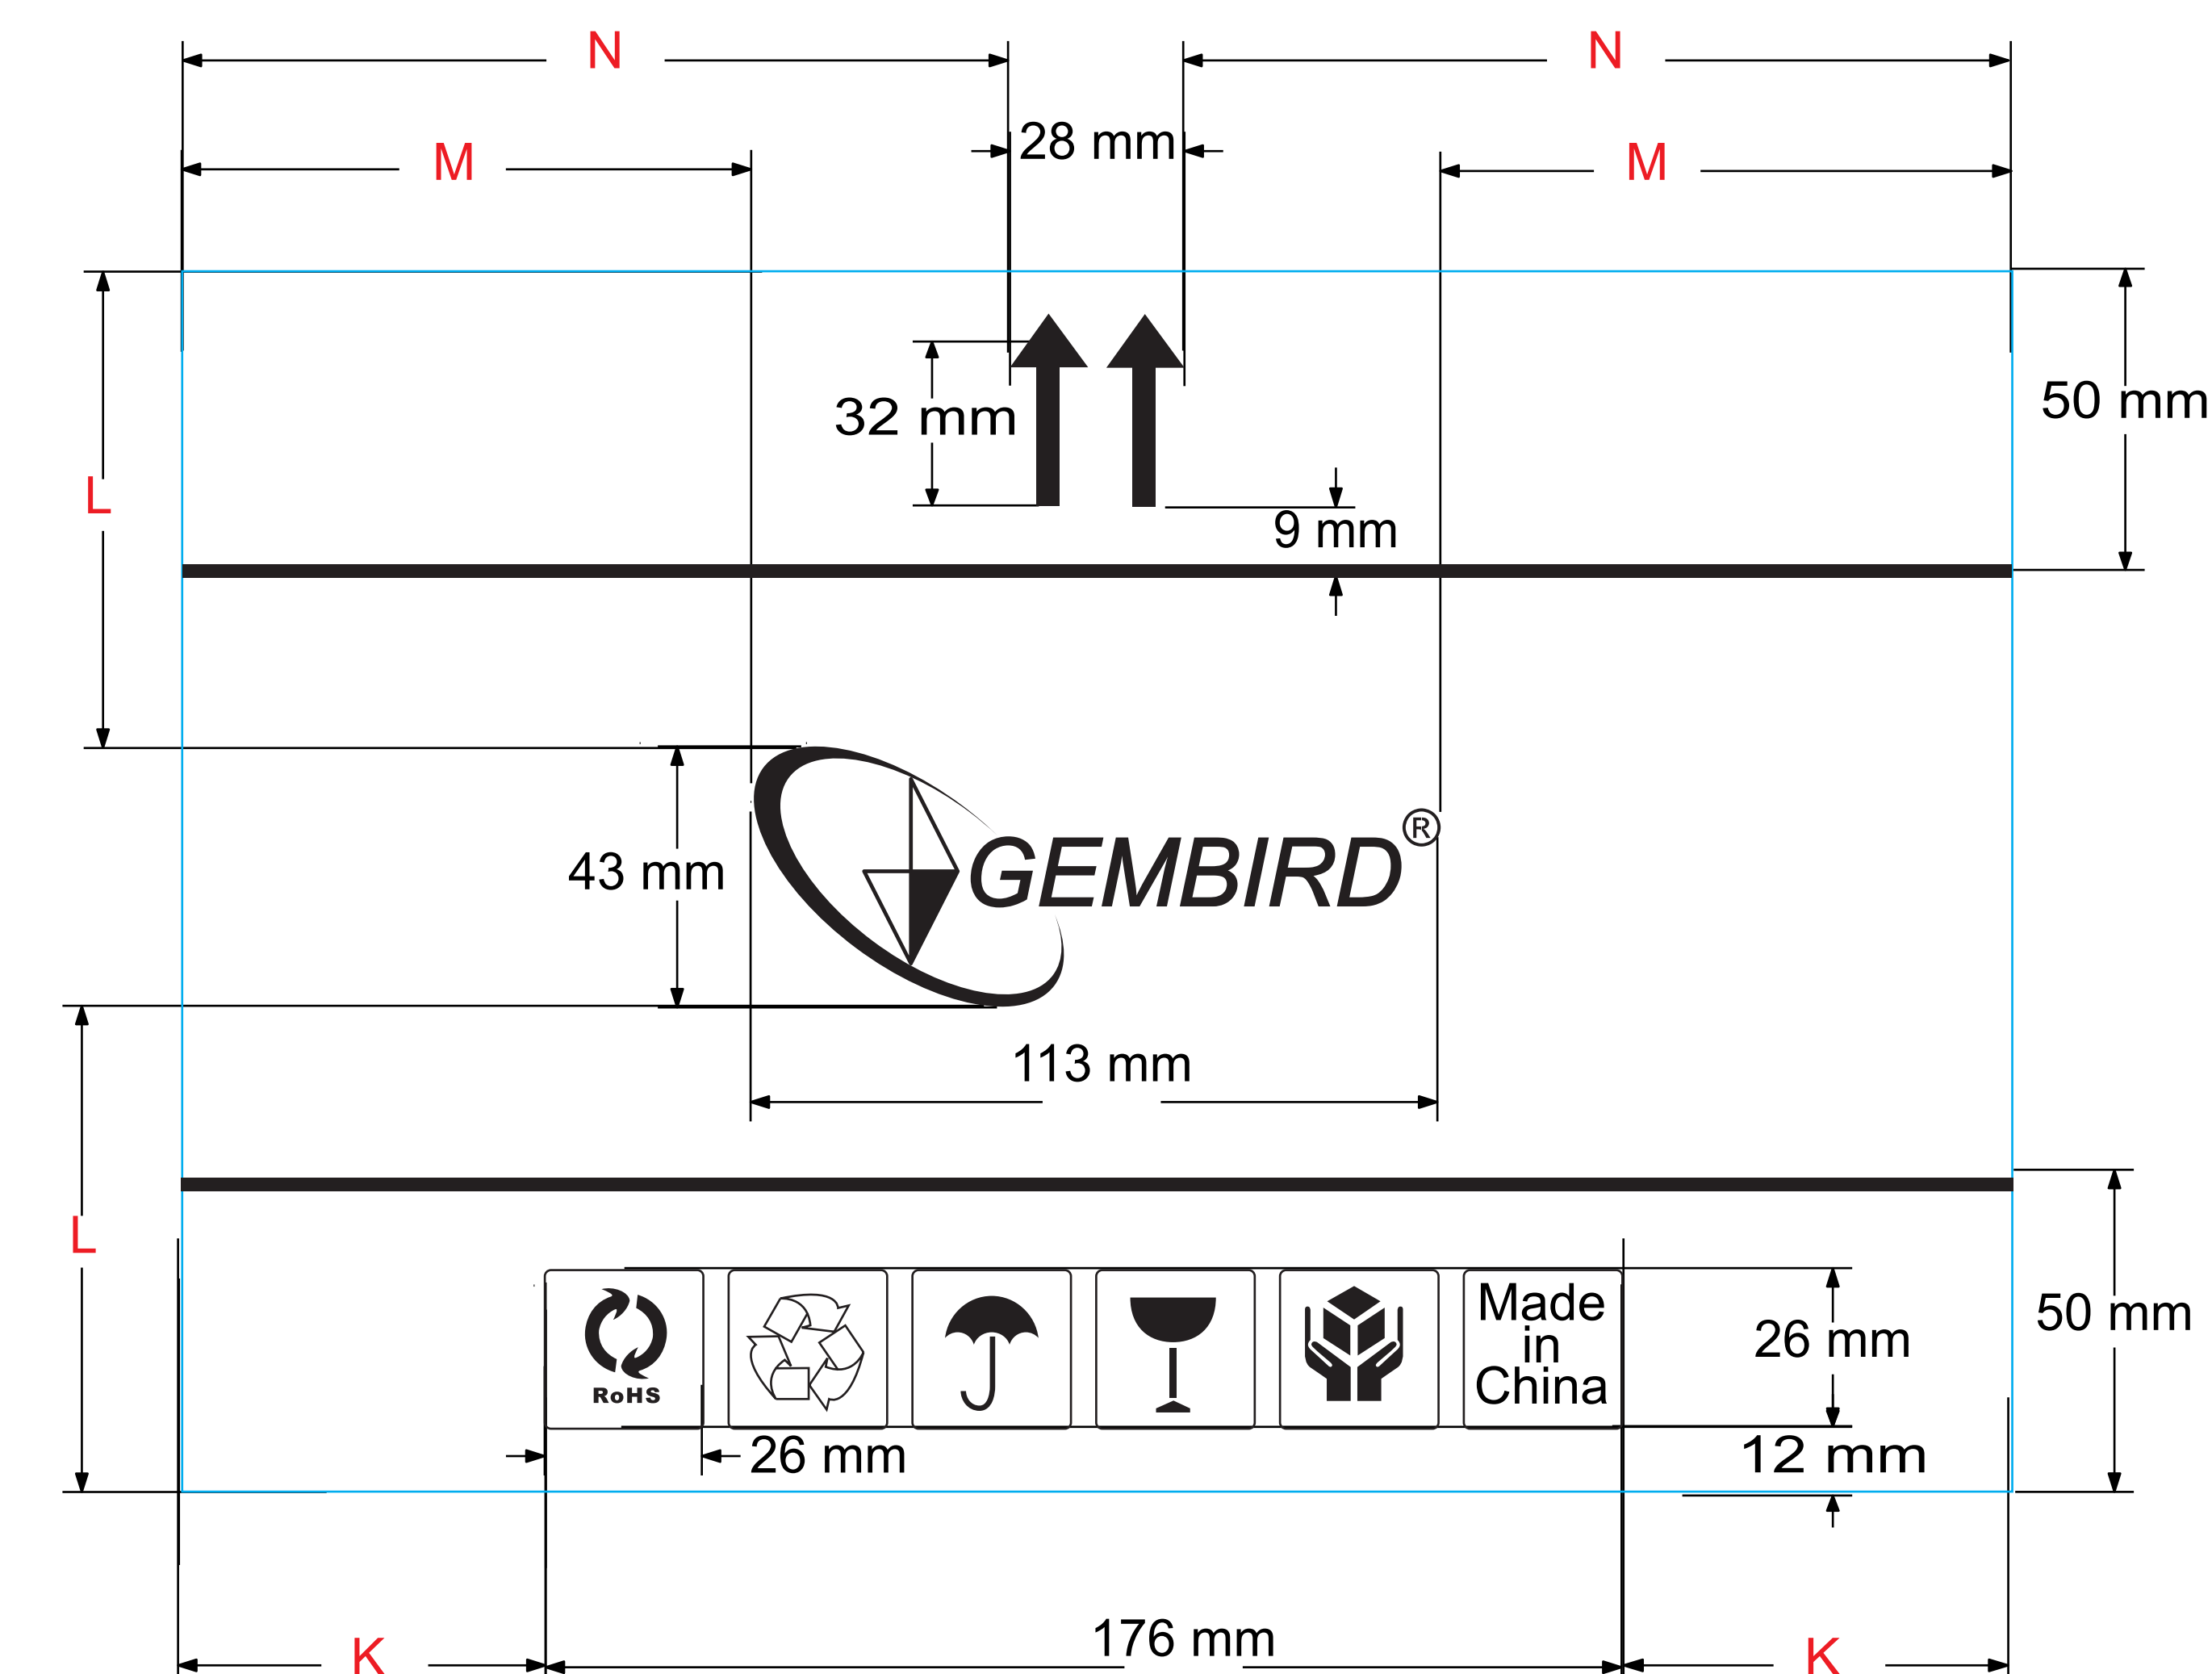
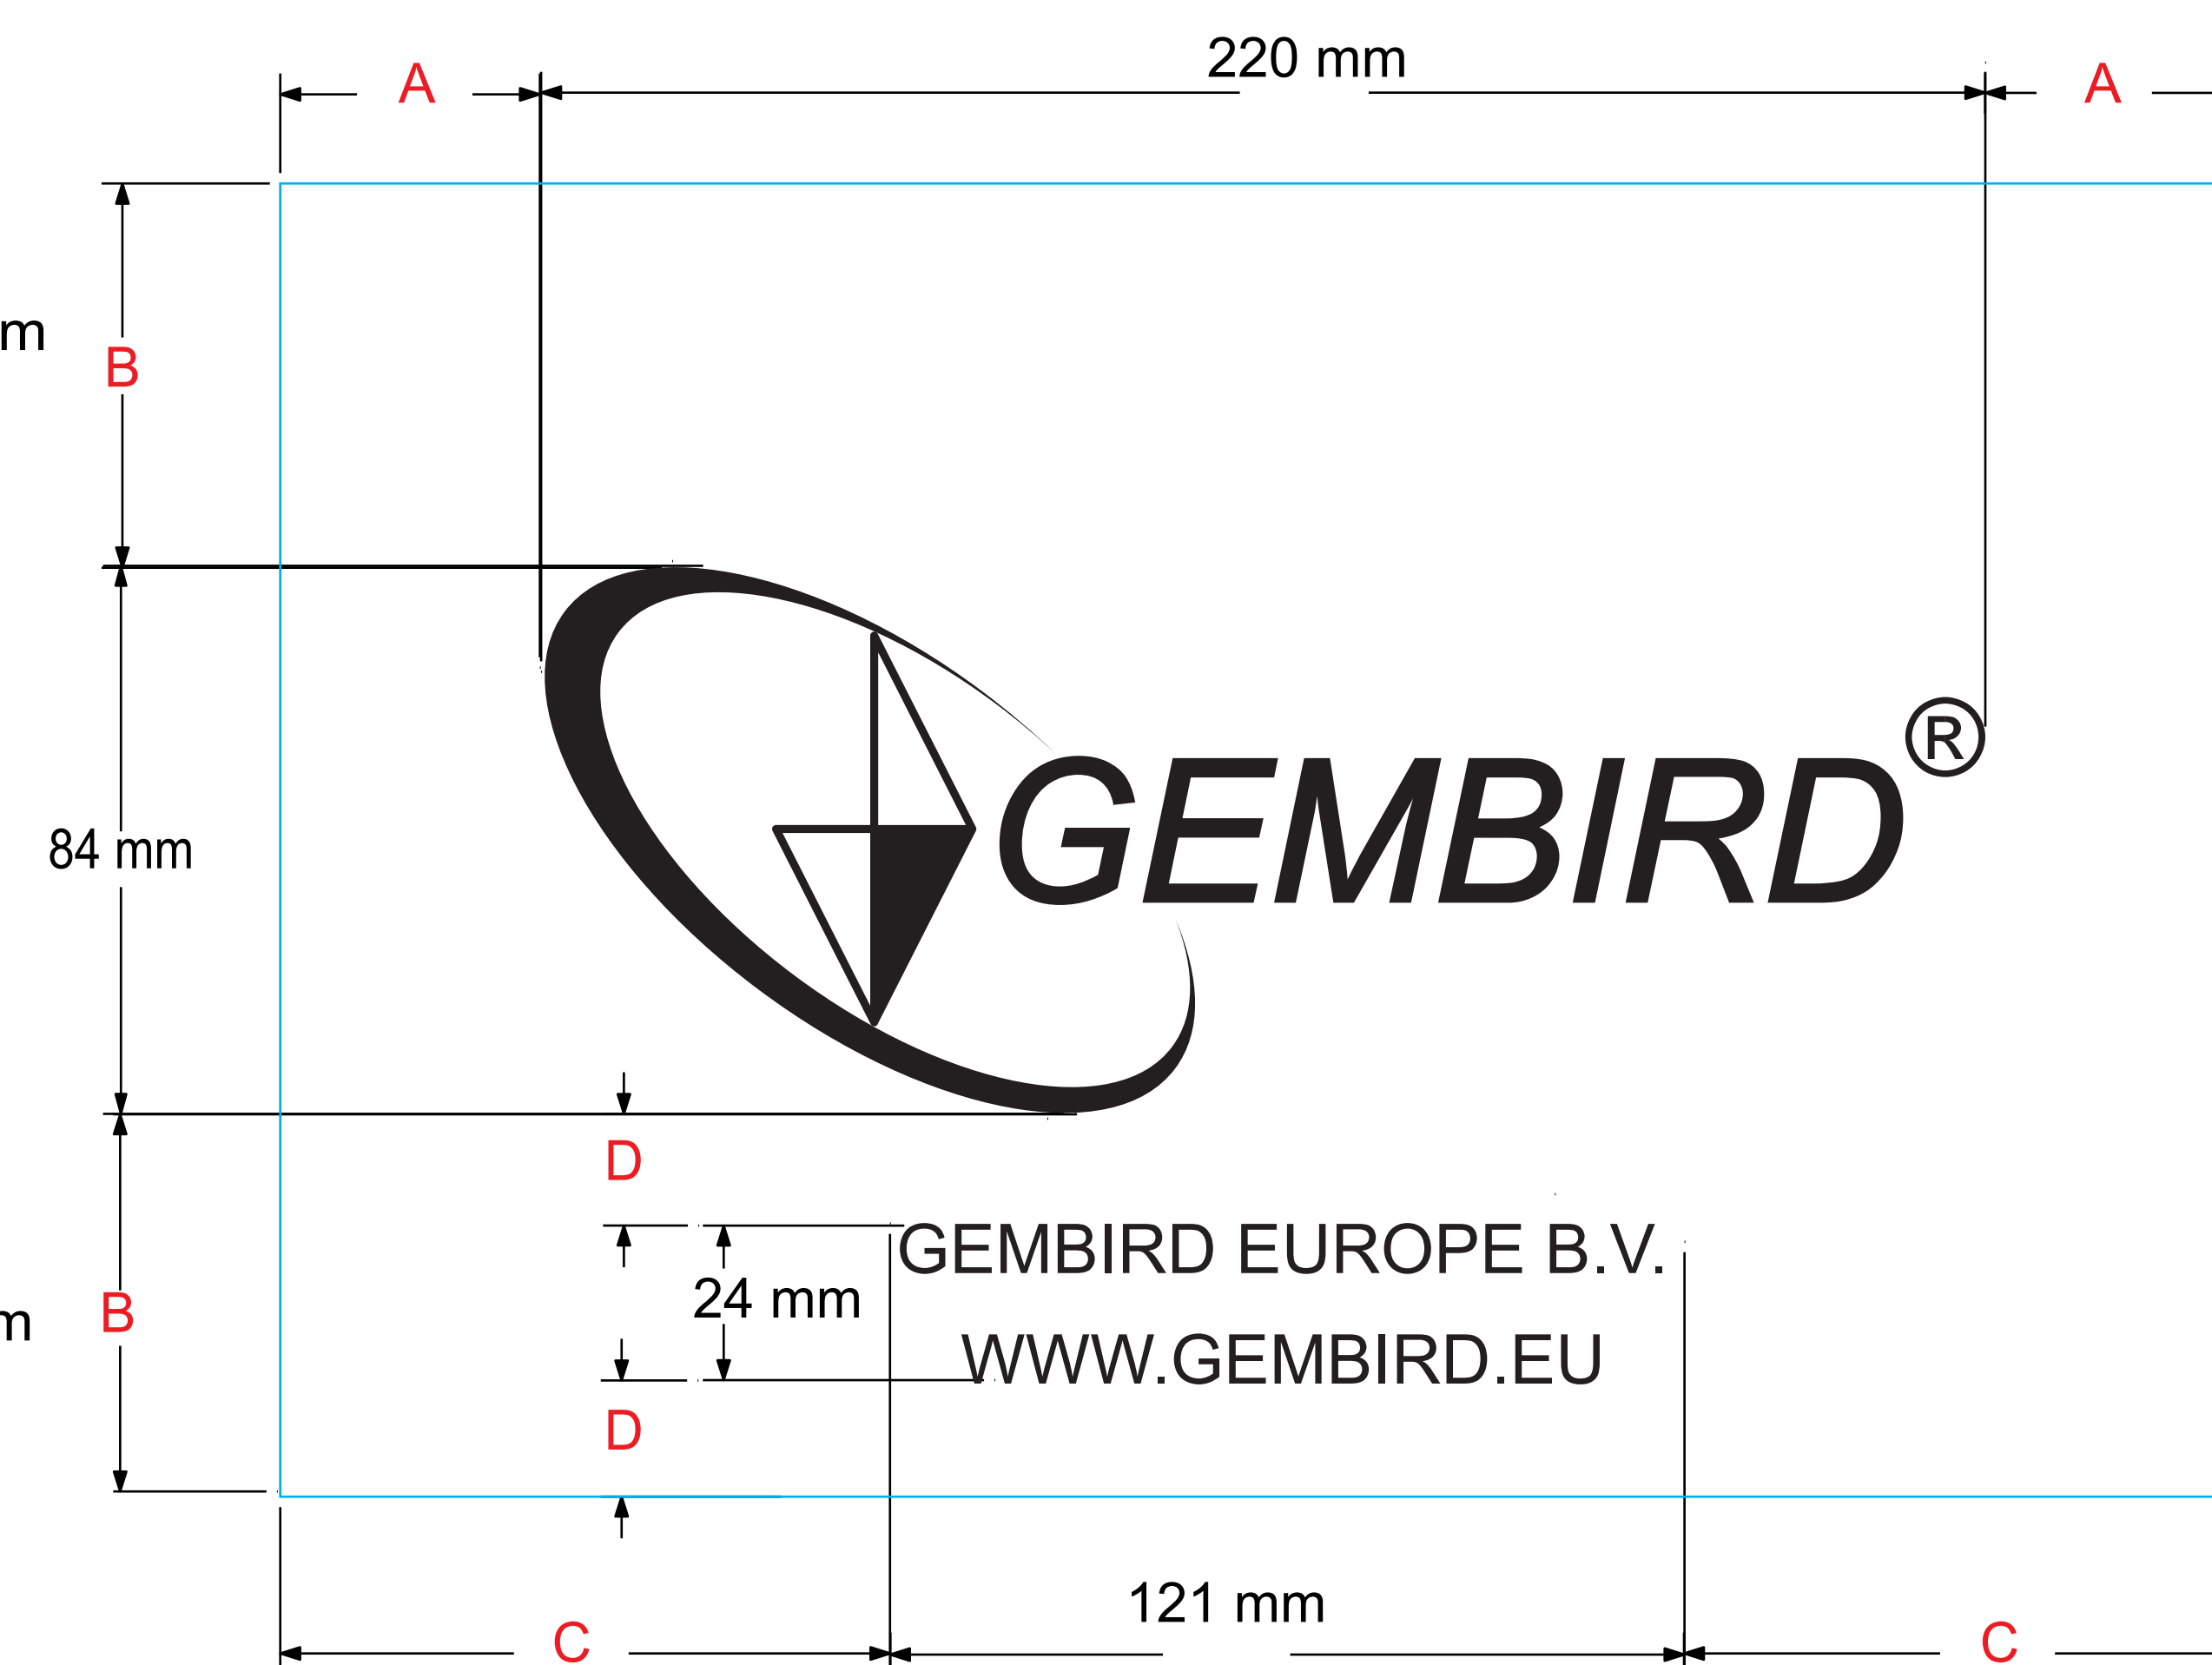
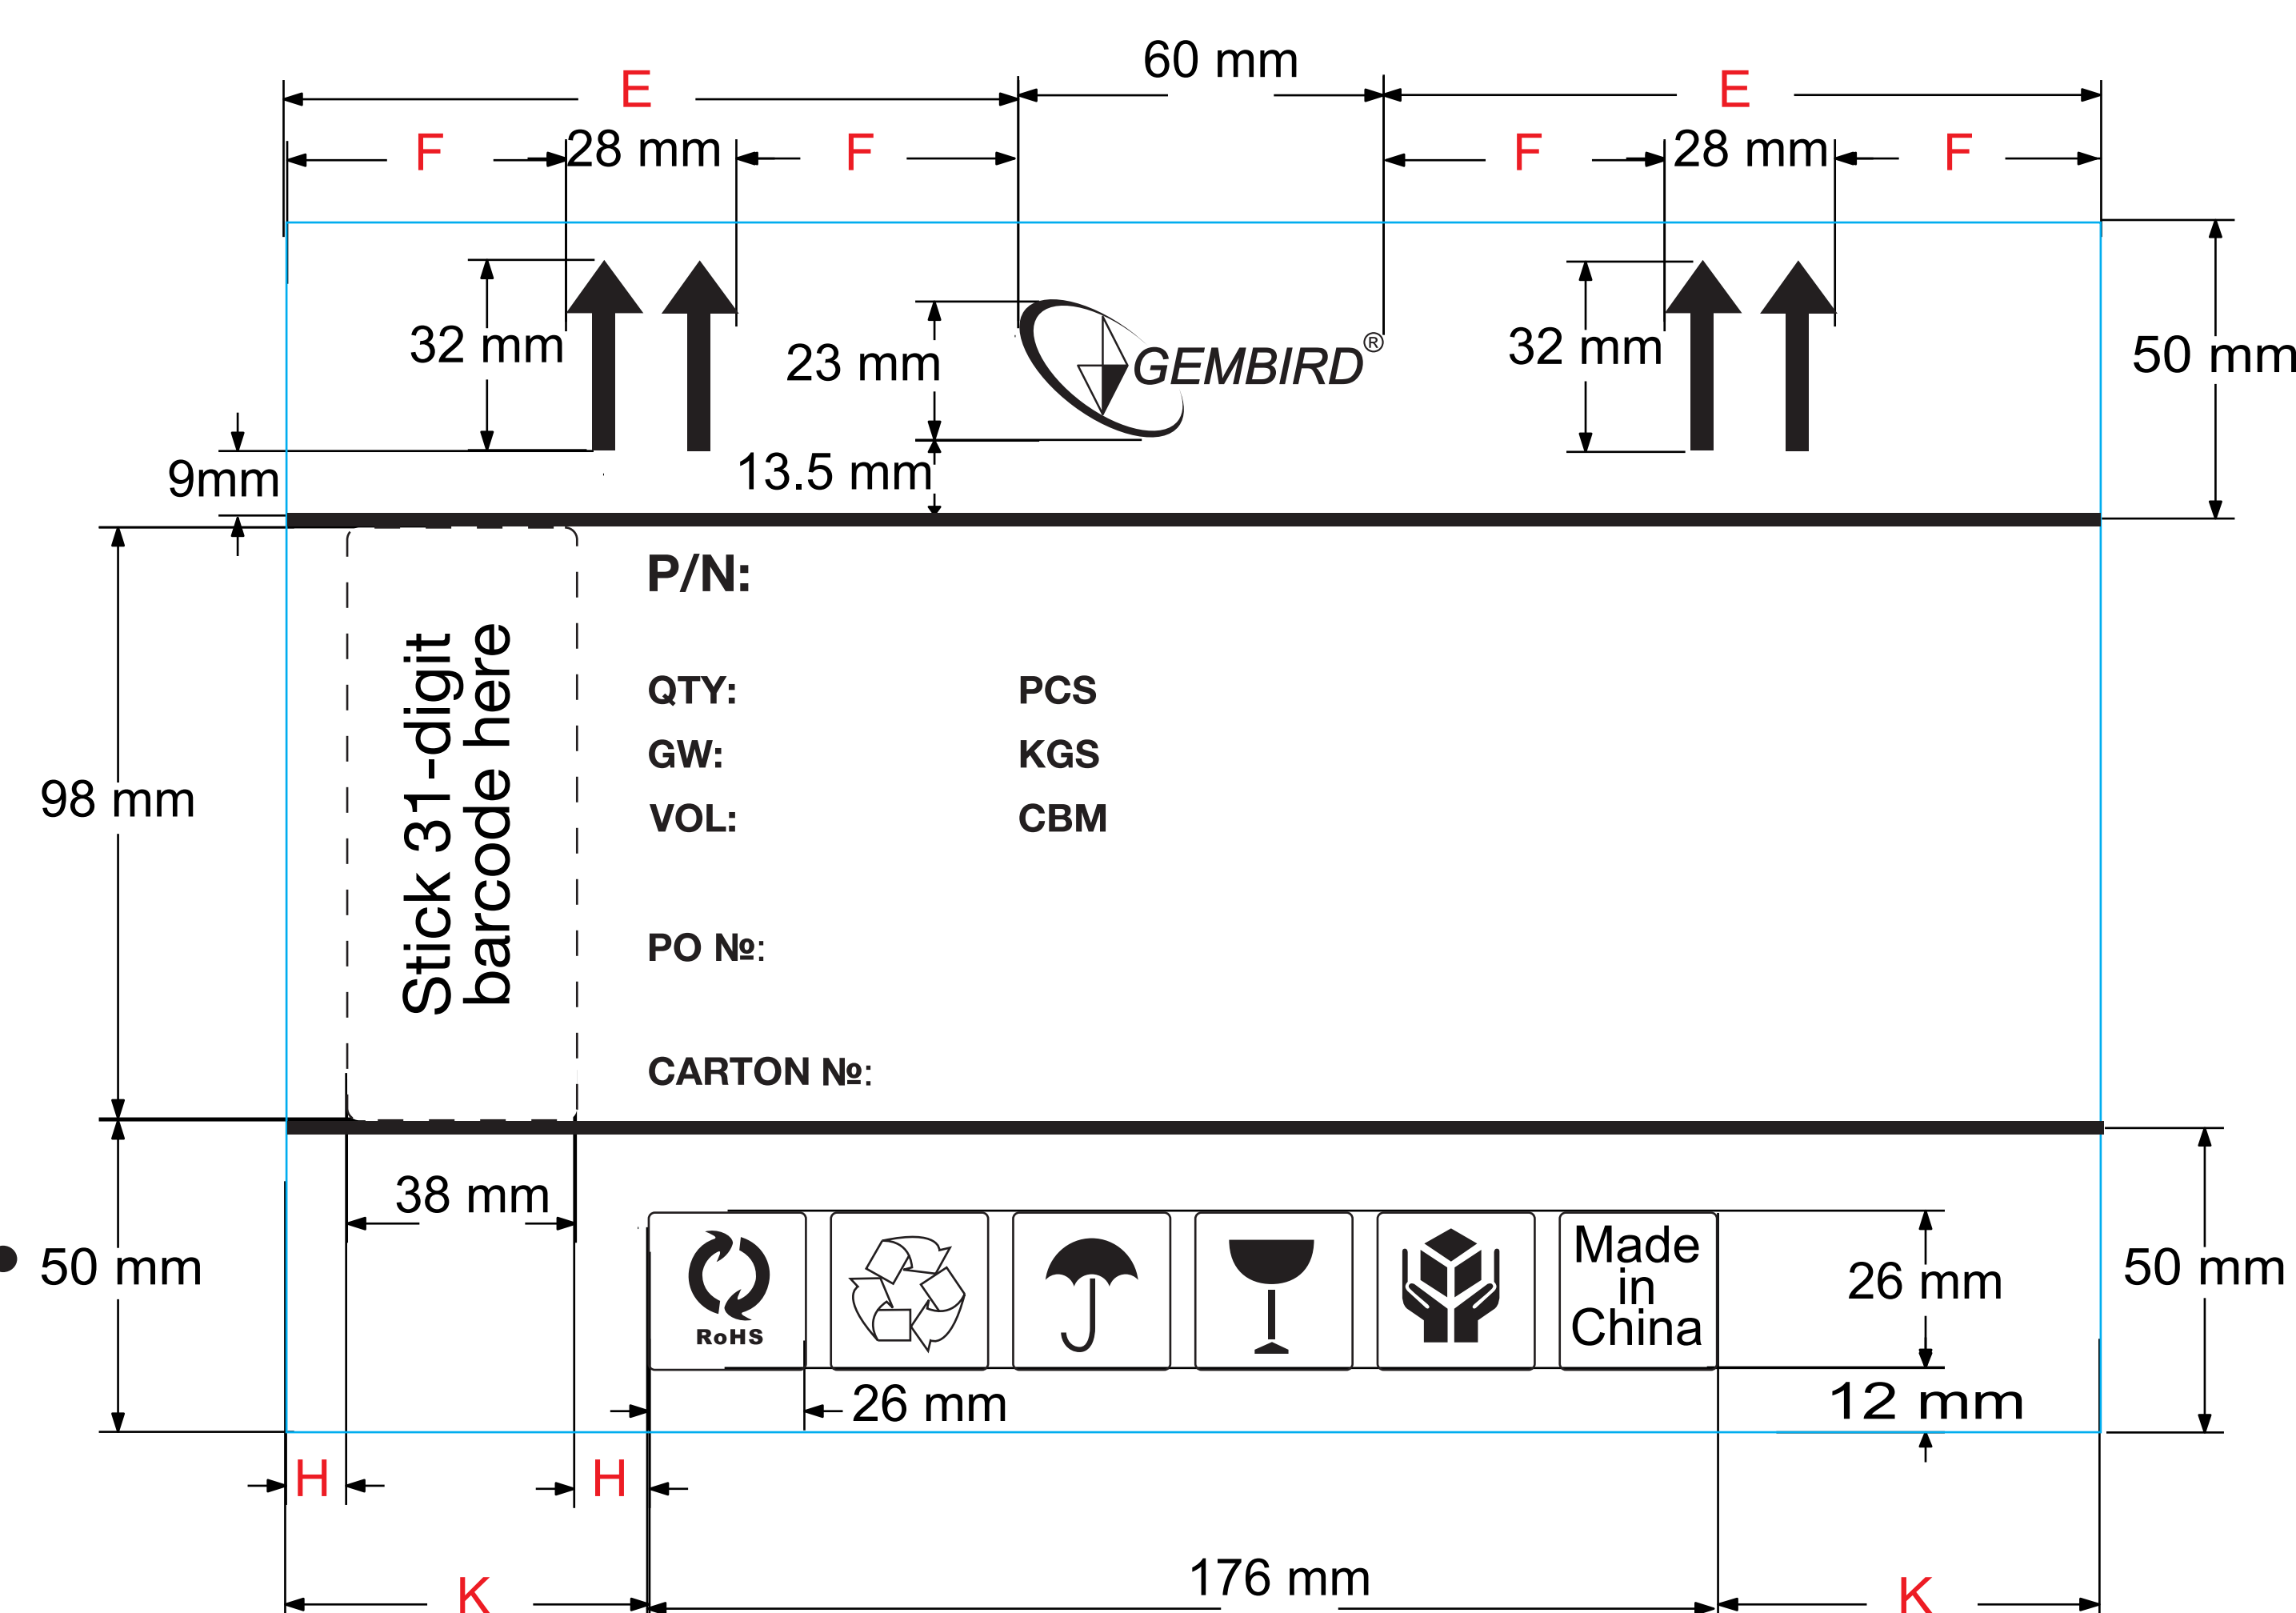
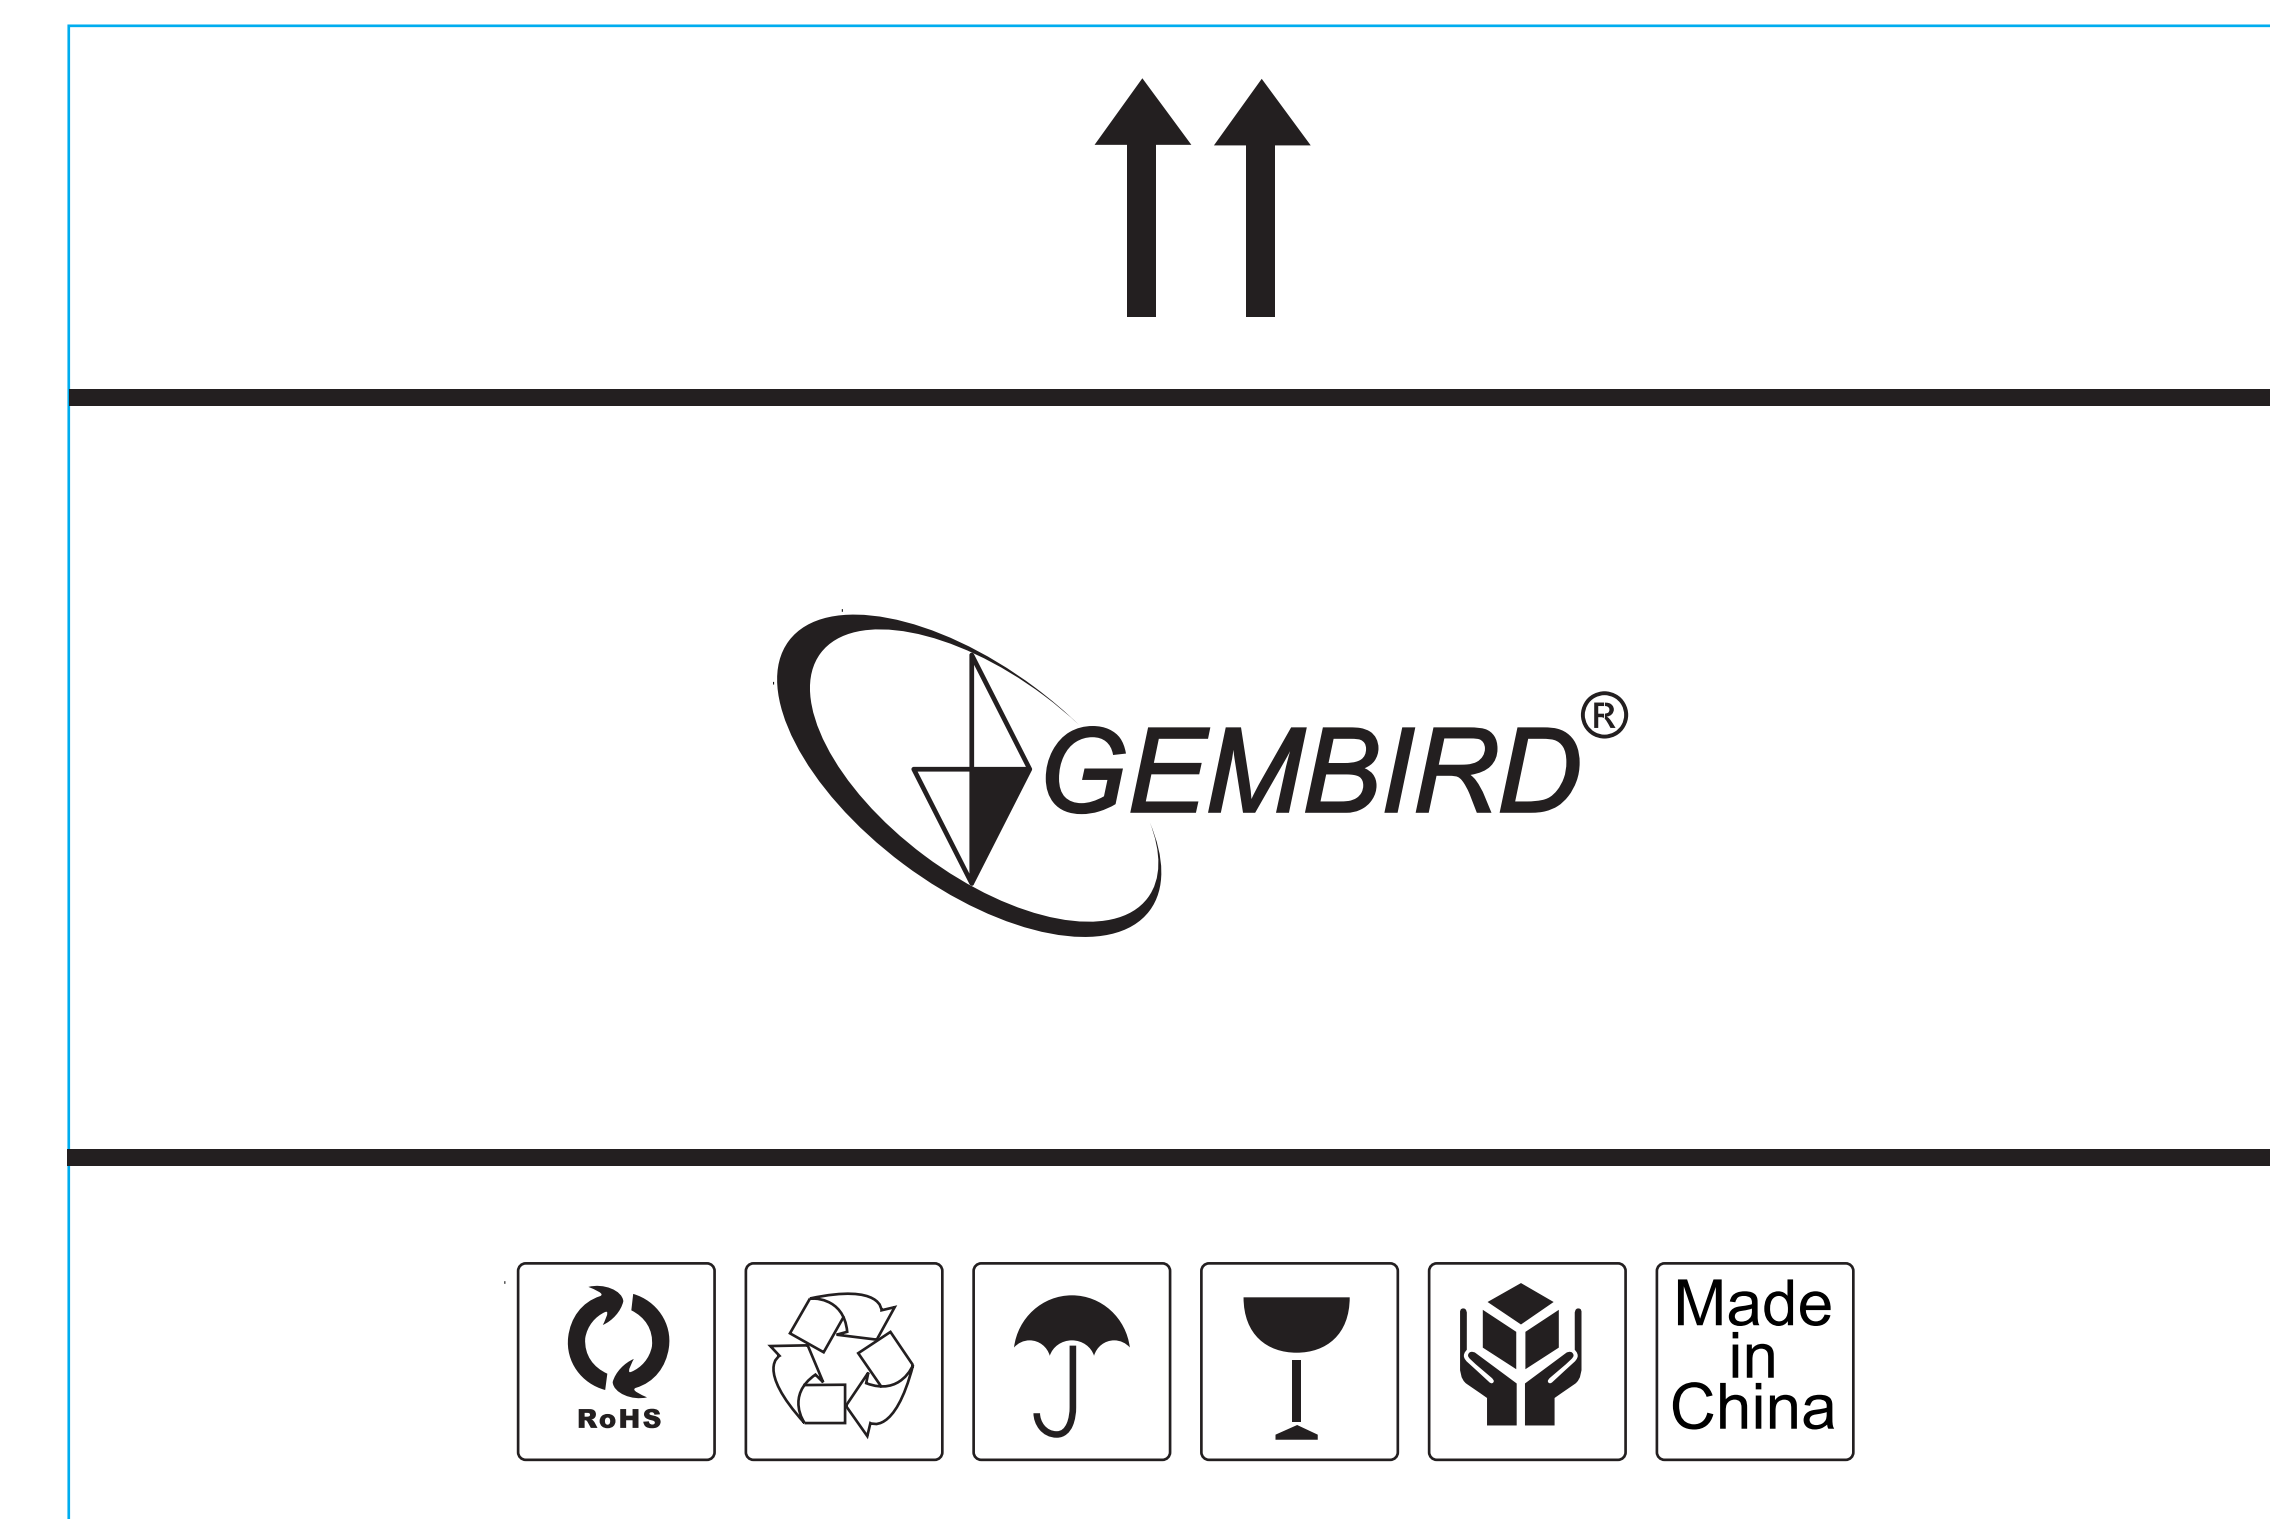


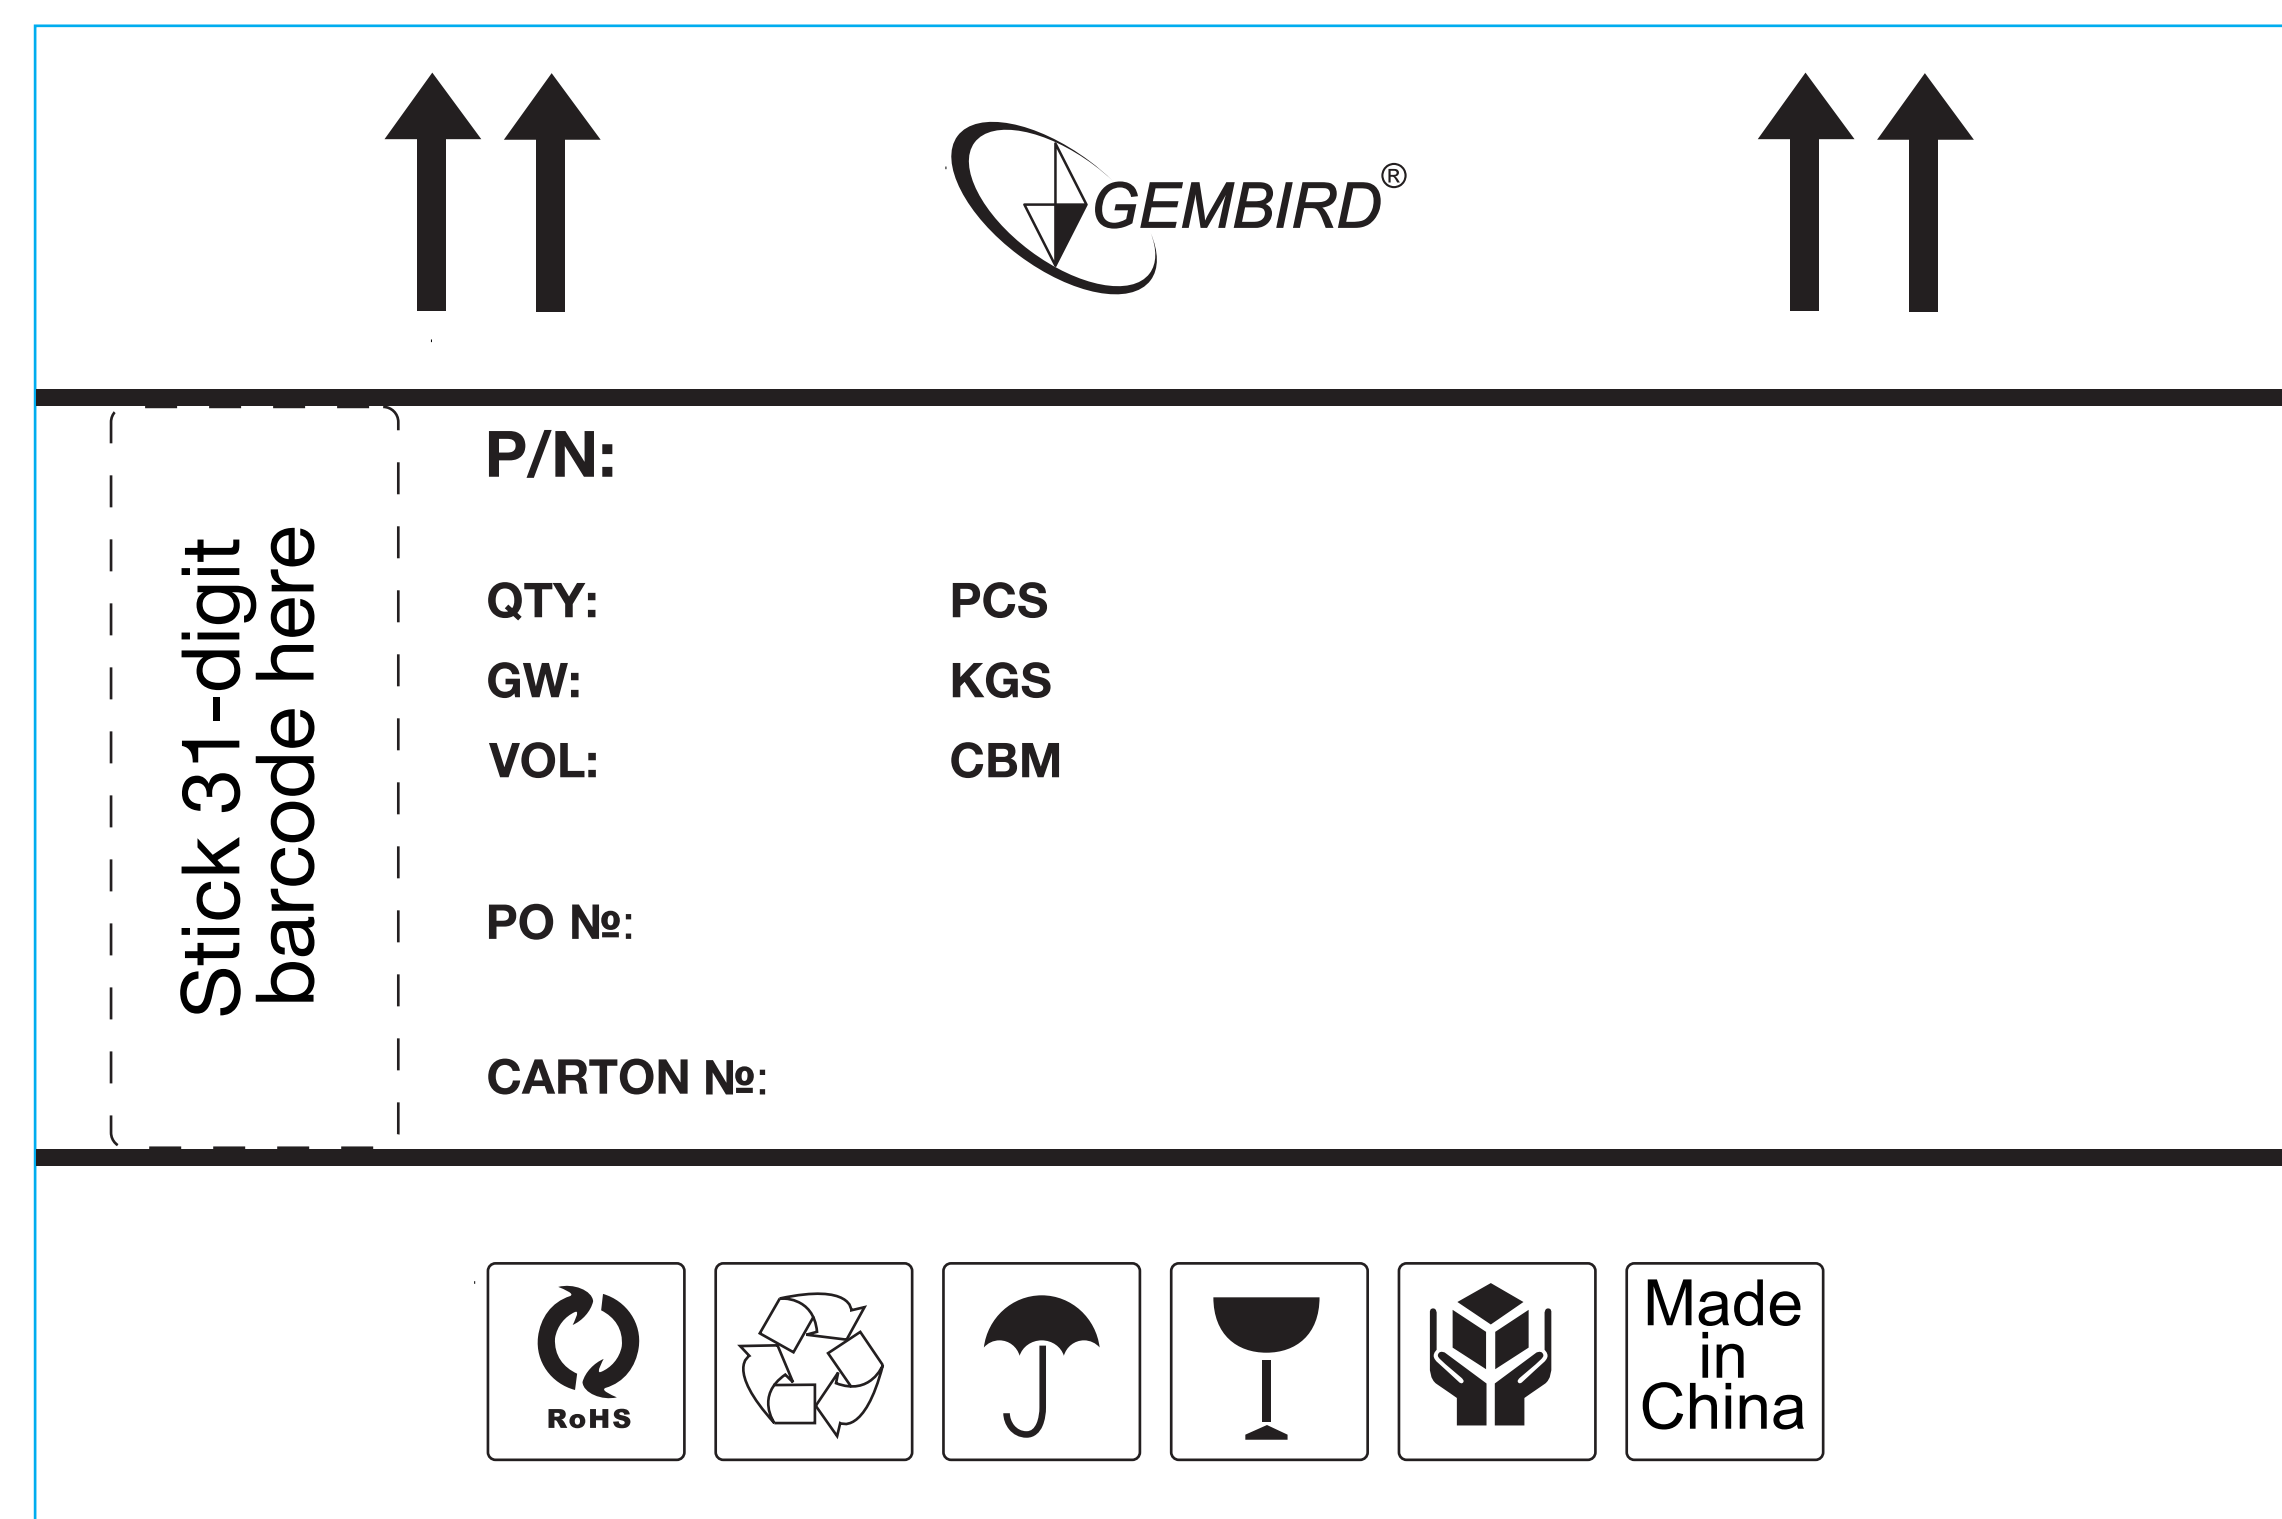

The barcodes should be sticked to the dedicated for them place on export carton in vertical direction. It is not allowed to stick barcodes in any other place on the export carton. The distance from the bottom of carton TO THE BOTTOM OF BARCODE SHOULD BE FROM 3 TO 10 CM.

外箱流水号条码贴纸（31个数字条码）必须垂直贴在外箱上指定位置，在外箱的其它位置上贴上此条码是不被允许的，并且要求条码贴纸必须与外箱底部有3-10公分（CM）的距离。